

CROUNSE CORPORATION
 11' Hull BARGE DRAFT TABLE
 Barges numbered 100 - 299 and 900 Series
 (see 12' & 13' Hull chart for barges numbered 300-629 & 1000-1579)

1. Take draft reading when barge is empty. Look up tonnage in table.
2. Take draft readings after barge is loaded. Look up tonnage in table.
3. Subtract empty tonnage figure from loaded tonnage figure. The resulting figure is the tonnage loaded into the barge.
4. To calculate tonnage removed from a barge, reverse order of 1 & 2.

Draft	Displacement	Draft	Displacement	Draft	Displacement
ft.-in.	Tons	ft.-in.	Tons	ft.-in.	Tons
1-1	204	4-1	797	7-1	1411
1-2	220	4-2	814	7-2	1428
1-3	236	4-3	830	7-3	1446
1-4	253	4-4	847	7-4	1463
1-5	269	4-5	864	7-5	1480
1-6	285	4-6	881	7-6	1498
1-7	301	4-7	898	7-7	1515
1-8	317	4-8	915	7-8	1532
1-9	333	4-9	932	7-9	1550
1-10	350	4-10	949	7-10	1567
1-11	366	4-11	966	7-11	1584
2-0	382	5-0	983	8-0	1602
2-1	399	5-1	1000	8-1	1619
2-2	415	5-2	1017	8-2	1637
2-3	431	5-3	1034	8-3	1654
2-4	447	5-4	1051	8-4	1671
2-5	464	5-5	1068	8-5	1689
2-6	481	5-6	1085	8-6	1706
2-7	497	5-7	1102	8-7	1724
2-8	514	5-8	1119	8-8	1741
2-9	530	5-9	1136	8-9	1759
2-10	547	5-10	1153	8-10	1776
2-11	563	5-11	1170	8-11	1794
3-0	580	6-0	1187	9-0	1811
3-1	596	6-1	1204	9-1	1829
3-2	613	6-2	1222	9-2	1846
3-3	630	6-3	1239	9-3	1864
3-4	646	6-4	1256	9-4	1882
3-5	663	6-5	1273	9-5	1899
3-6	680	6-6	1290	9-6	1917
3-7	696	6-7	1307	9-7	1934
3-8	713	6-8	1325	9-8	1952
3-9	730	6-9	1342	9-9	1970
3-10	746	6-10	1359	9-10	1987
3-11	763	6-11	1376	9-11	2005
4-0	780	7-0	1394	10-0	2022